


# CUM ALEGEȚI VENTILATORUL



	E36202	E48202	E56002	E60002
<b>ÎNĂLȚIME (m)</b>	<b>L (m)</b>	<b>L (m)</b>	<b>L (m)</b>	<b>L (m)</b>
3,0	10,5	12,5		
4,0	11,2	12,8	14,5	21,5
6,0	12,5	13,5	18,5	19,5
9,0			16,5	18,1
12,0			12,5	16,5
14,0			10,5	

VEDERE LATERALĂ A INSTALĂRII

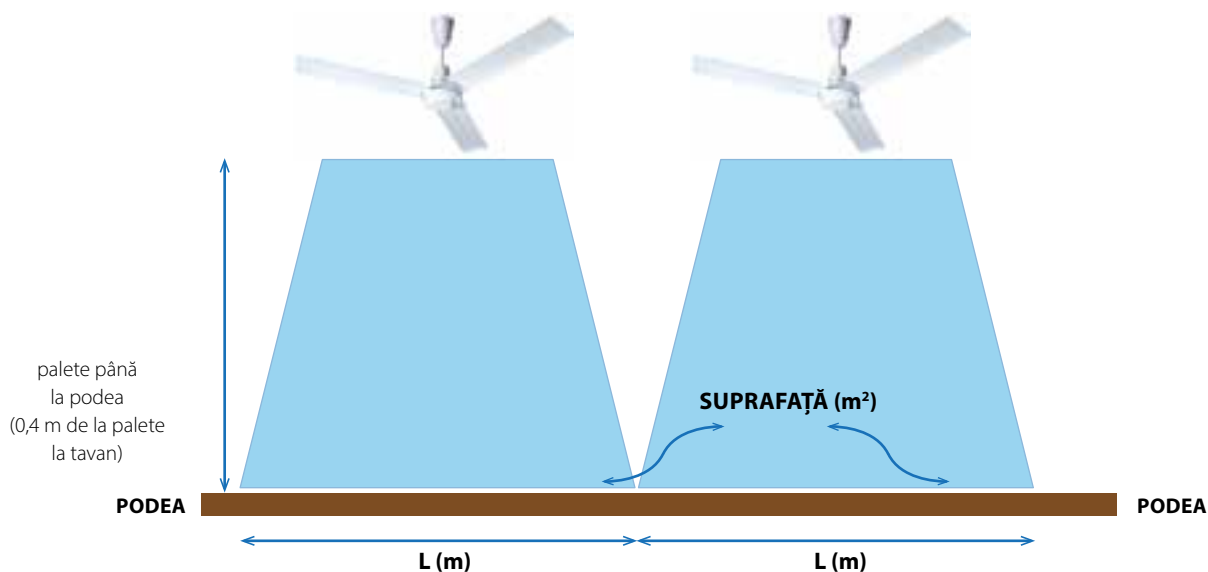

	E36202	E48202	E56002	E60002
<b>ÎNĂLȚIME (m)</b>	<b>SUPRAFAȚĂ (m²)</b>	<b>SUPRAFAȚĂ (m²)</b>	<b>SUPRAFAȚĂ (m²)</b>	<b>SUPRAFAȚĂ (m²)</b>
3,0	110	156		
4,0	126	165	210	
6,0	156	182	342	462
9,0			272	380
12,0			156	328
14,0			110	272

EXEMPLU DE AMPLASARE  
A DESTRATIFICATOARELOR MASTER  
ÎNTR-O FABRICĂ

